




WONDERCAP

WONDERCAP PLANTERBOX INSTALLATION

Planter Box Installation

Wondercap Planter Box Installation

1. Set up the 100mm Wondercap Kit 10mm lower than the FSL of the floor of the planter box prior to the concrete pour.
2. Remove the Base & Cap and waterproof the area as required.
3. Example: Use the socketed end of the 100mm sewer pipe and cut to 500mm.
4. Use a 15mm spade bit drill holes as per detail.
5. Wrap the entire 100mm length of pipe with hessian to filter out the planter soil.
6. Remove the Cap from the Base and place the socketed end of the pipe over the Base, support and hold into position whilst backfilling.
7. Place Cap over the open for easy access in the future.
8. Note: For larger planter boxes - Extra agg lines can be connected by installing a 100mm T Junction onto the Base.

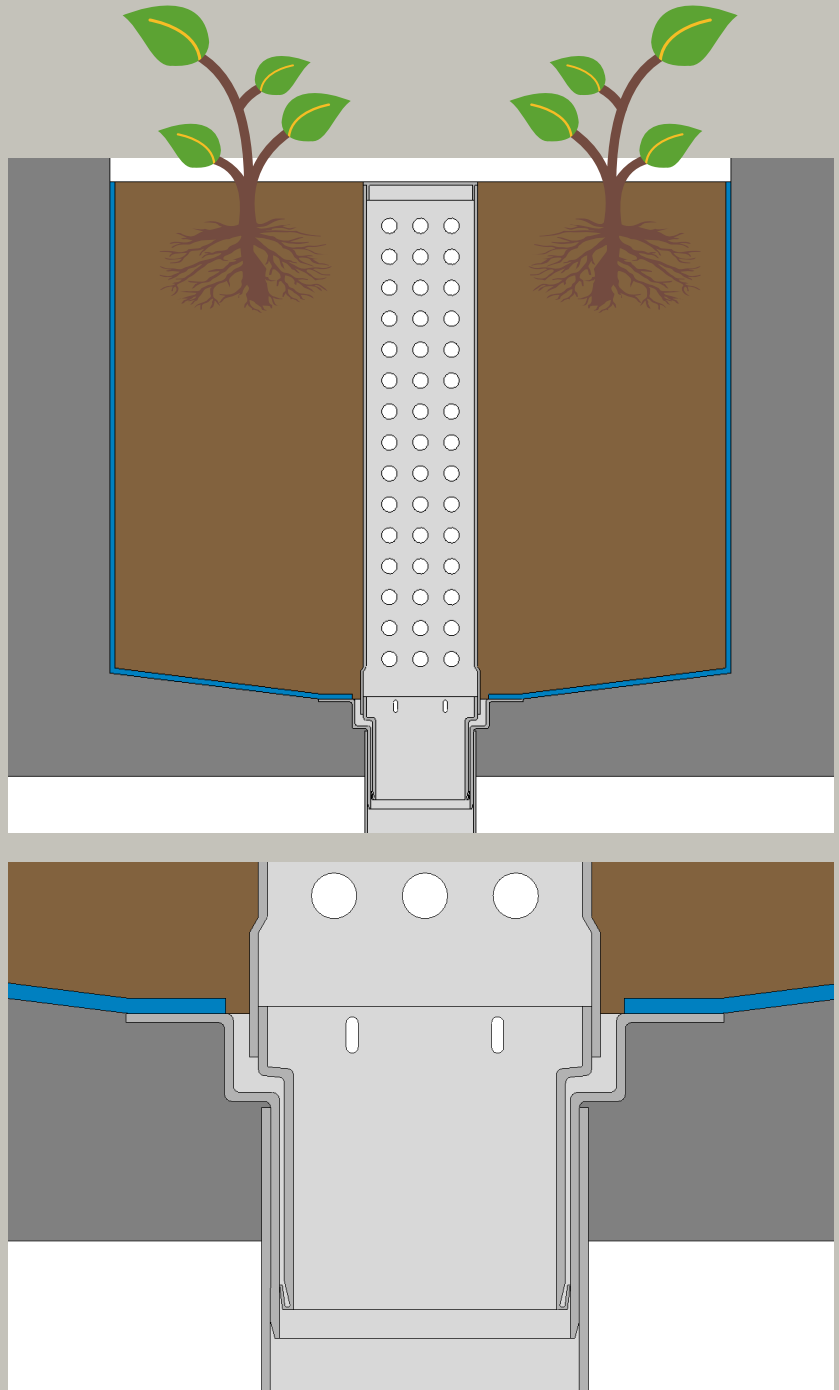

Implement the Wondercap Drainage System in your next project

For more information visit
www.wondercap.com.au