




WONDERCAP

LINEAR TRENCH DRAIN INSTALLATION

For All Constructions

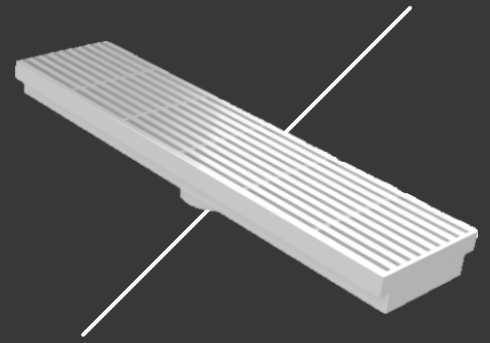

Linear Trench Grate Installation





Using the Wondercap Drainage System with this installation will reduce the labor, reduce the bedding costs, and deliver an easy connection and quality finish.

Pre-setup Information

Note: Typical Linear grates are 100mm wide and have an overall depth of 25mm.

Recommended using the the kit for the pre-plumbing set out for the location of the drain.

- Centre up the Wondercap Drainage System 100mm away from the finished tiled wall and centre of the shower wall - so the linear drain will drain quickly from both ends with a centre outlet.
- Centre measurement will allow for the flange lip to finish inside of the bathroom wall and can be easily waterproofed over.
- The centre measurement will provide that flexibility that allows up to 50mm tolerance within the set out.
- We recommend installing the kit (flush to the floor) as this will reduce the bedding thickness.
- Set up as per diagrams.

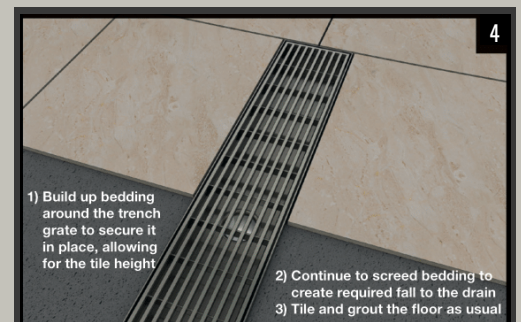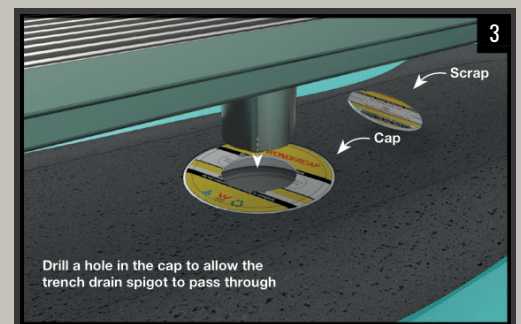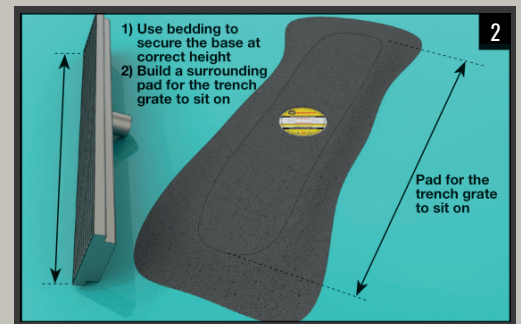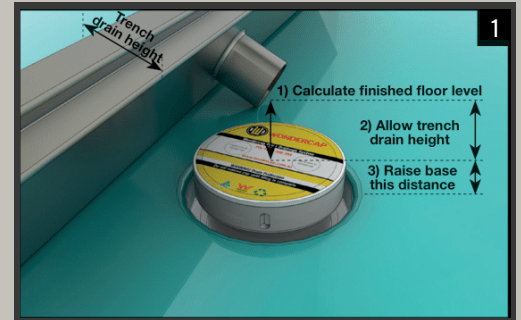

Give yourself a high quality finish by using a Wondercap Drainage System in your next linear trench grate installation

For more information visit
www.wondercap.com.au