


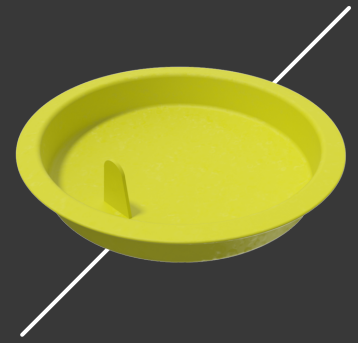

WONDERCAP

WATERPROOFING INSTRUCTIONS

For All Constructions



Waterproofing

Waterproofing Requirements as per AS 3740-2010 3.14.1 A drainage flange shall be installed with the waterproofing membrane terminated at/in the drainage flange to provide a waterproofing connection.

Step 1:

Discard the foam ring and remove the base & cap and set aside.


Step 2:

Waterproofing is to be installed as per the Australian Standards AS 3740-20110. Always read the manufacturer's instructions and requirements prior to use.

Pro Tip:

After the waterproofing has been completed and allowed to dry the Wondercap coloured test plug can be installed to flood test the shower area to guarantee the shower area is watertight. The inexpensive test plug can be left overnight for the test to make sure the job is right and then can be easily removed the next day by the follow up trades going to site. Reduce cost/ cuts down time/ delivers a better watertight job.

**WARNING: DO NOT APPLY
WATERPROOFING MEMBRANE
DOWN THE DRAINAGE PIPE**

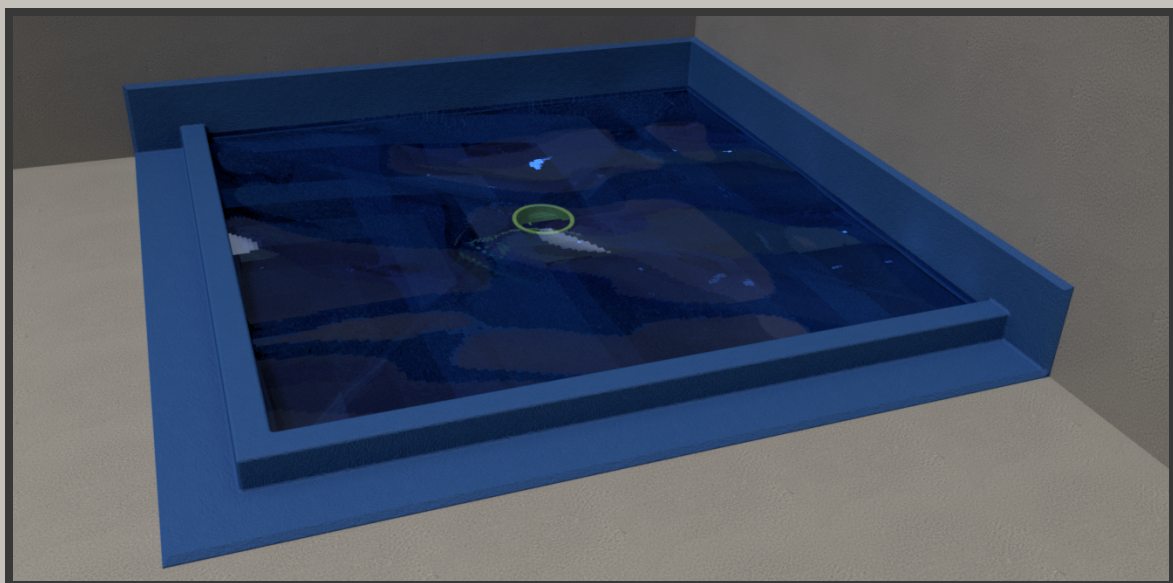

Make sure your waterproofing is water tight by using our new insert test plugs

For more information visit
www.wondercap.com.au